

HME

®

MD-XLR Dynamic Headset Adapter

INSTALLATION INSTRUCTIONS

The enclosed adapter is one of the following three types.

<u>Model No.</u>	<u>Connector Type</u>
MD-XLR4M	4-Pin Male XLR
MD-XLR4F	4-Pin Female XLR
MD-XLR5F	5-Pin Female XLR

The adapter is used with various types of headsets that have a dynamic microphone and an XLR connector which mates with one of the connector types shown above. Use the adapter to connect the headset to your HME Beltpac as follows.

- Plug the mini-DIN connector at one end of the adapter into your Beltpac.
- Plug the headset connector into the other end of the adapter.



Figure 1. Connect mini-DIN connector to Beltpac and XLR adapter to headset

- The current version of MD-XLR adapters has up to 12dB more MIC GAIN than previous versions. The current version can be identified by a **blue sleeve**. Earlier versions have either a black sleeve or no sleeve at all.
- Use the enclosed clothing clips to fasten the adapter and headset cables to your belt or clothing. Position the adapter as far from the Beltpac as possible. Figure 2 shows the suggested position, which helps to avoid loose-hanging cables and interference from the Beltpac.



Figure 2. Clip cables to belt or clothing